Hipster KOBRA

User manual



KOBRA 550410 Made in Sweden



1. Preface

The Story

Arvika, Sweden; the home of where the Hipster brewer was created and innovated. It is in this small industrial town in the middle of Sweden, where hard working men and women reap their harvest of diligent work; a work of tradition and dedicated skilled craftsmanship. Arvika is sincerely famous for it's warmth during the summer, for it's environment of magnificent forests and foremost for the surroundings of 365 smaller lakes, that enhance mysticism and stories from the past to the present. The home of the Hipster brewer.

The Hipster is classified by baristas and coffee people all over the world as one of the best amongst filter coffee machines. Hipster is a unique brewer. Unlike any other brewer in the market it let's you control blooming, temperatures in 3 phases and water distribution for each recipe. It is designed and developed in Sweden by a team with vast experience from the coffee industry.

The Hipster is a game changer as it brings filter coffee to a new level. Precision of flow rate, temperature and extraction time are critical factors to reach the best possible extraction. In order to preserve the coffee's origin in flavour and fragrance, makes the demands high on these 3 parameters precision in order to recreate the same taste experience time and again.

The fresh water system and the recipe parameters makes a huge impact on the taste and a tiny impact on the environment as it consumes barely 7 watts when not brewing.

We hope that you will enjoy your new Hipster brewer.

With best wishes



Copyright 2019 All rights reserved 3TEMP/PLAE2TECH

Table of contents

1. Preface	3
2. Safety information	6
2.1 Introduction	
2.2 This user manual	
2.3 Intended use	
2.4 Capacity of the machine	
2.5 General safety instructions	
2.6 Disposal	
3. Before first use	_
4. Product description Hipster KOBRA	
4.1 Description	
4.2 The cycle of The Hipster taste-profiling	
5. Technical data	
5.1 Technical data	
5.2 Wiring diagram HeatCase	
6. Unpacking	
7. Installation instructions	
7.1 Description	
7.2 Installation	
7.3 Installation button controller	
7.4 Installation HeatCase	
7.5 Machine status	
7.6 Connect the water filter system7.7 Connect the network	
8. User instructions	
8.1 Prepare a brew	
8.2 Select recipe	
8.3 Thermos detachable serving base	
9. Recipe settings with button controller	
10. Care and maintenance after use	
10.1 Cleaning instructions	
10.2 Cleaning Thermos	
10.3 Cleaning water strainer	
11. Spare parts	
12. Extra additions	
13. Declaration of conformity	
14. Warranty	
15. Notes	.30

2. Safety information

2.1 Introduction

Save these instructions for future reference. Information for the user: safety instructions



Caution!



Note!



Burn hazard!



Electric shock hazard!



Warning!



Protect your eyes.

2.2 This user manual

This user manual is an integral part of the appliance and must be kept in an accessible place under the working life of the appliance.

2.3 Intended use

This appliance is intended to be used in applications such as:

- Kitchen areas, shops.
- Offices and other commercial working environments.
- Hotels, motels,
- Bed and breakfast environments.
- Switch off the appliance when NOT in use.
- Do not use this appliance for anything other than intended use. Any maintenance other than cleaning should be performed by authorised person.
- Do not install the machine in environments in which the temperature is 0 C or less.
- Do not use outdoors.





2.4 Capacity of the machine.

For the optimal performance of the PULS these parameters shall not be exceeded:

Maximum permissible inlet water pressure: 800KPa (8Bar)

Minimum permissible inlet water pressure: 200KPa (2Bar)

Maximum working temperature: 40C

Minimum working temperature: 10 C

2.5 General safety instructions



Warning! In case of improper use the responsibility is on the user.

Read all the user instructions before using the machine. This guide contains important instructions for proper and safe use of the Hipster brewer. Always keep this manual close at hand for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. In the event of technical problems or any questions. Please contact our support@3temp.com

- The appliance is only to be installed in locations where it can be overseen by trained personnel.
- The English language is used for the original instructions.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children without supervision.
- The instructions shall state that access to the service area should only be permitted to persons having knowledge and practical experience of the appliance, in particular as far as safety and hygiene are concerned.
- Indoor use.



Burn hazard

- This appliance dispense hot water from the brewing hat and may cause injury if not used correctly. The brew basket must be in place before a recipe is started.
- Do not move the brew basket while the coffee is being brewed.
- Do not touch hot surfaces with your hands; use the handles and buttons.



Electric shock hazard!

- Avoid getting the coffee machine wet and do not spray liquids onto it. In the event of contact with liquid immediately switch off the power at the socket or main breaker and dry the appliance thoroughly.
- Never immerse the machine, plug or mains cable in water because there is a danger of electric shock.
- Never try to put out a fire or flames with water. Turn of the appliance and remove the plug from the socket, and smother the flames with a fire blanket or other appropriate cover.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If the mains cable is damaged it must be replaced by the customer service to avoid a hazard.
- Do not install the machine in environments in which the temperature is 0° C or less.
- Do not move the Hipster brewer whilst in operation.
- Do not use the Hipster brewer on a sink drain board.
- Do not place the Hipster brewer on or near a hot gas or electric burner, or where it could touch a heated oven.
- Keep the appliance and accessories clean. Follow the cleaning instructions provided in this manual.
- Only use original spare parts. The use of spare parts not approved by the manufacturer could lead to fires, electric shocks or personal injury.
- Do not place on top of any other appliance.
- Appliance must not be cleaned by a water jet.

2.6 Disposal



Do not dispose of the device in household waste! Recycle devices, accessories and packaging. Observe applicable national regulations.

EU only: In accordance with European Directive on waste electrical and electronic equipment and implementation in national law, used electric power tools must be collected separately and handed in for environmentally friendly recycling. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.

3. Before first use

Remove all packaging materials attached to your Hipster KOBRA. Ensure that you have removed all parts and accessories before discarding the packaging.

Clean parts and accessories, filter, basket and thermos. Use warm water and a gentle dish washing liquid and rinse well. Wipe the outer housing and drip tray with a soft damp cloth and dry thoroughly.



Note! We recommend that you save the packaging for a possible return of goods.




Danger! Do not immerse power cord, power plug for appliance in water or any other liquid. Do not clean any of the parts or accessories in the dishwasher. Accept dish try. Important to clean the product propertly.



Important! Ensure that you have removed all parts and accessories before discarding the packaging.

4. Product description Hipster KOBRA

4.1 Description

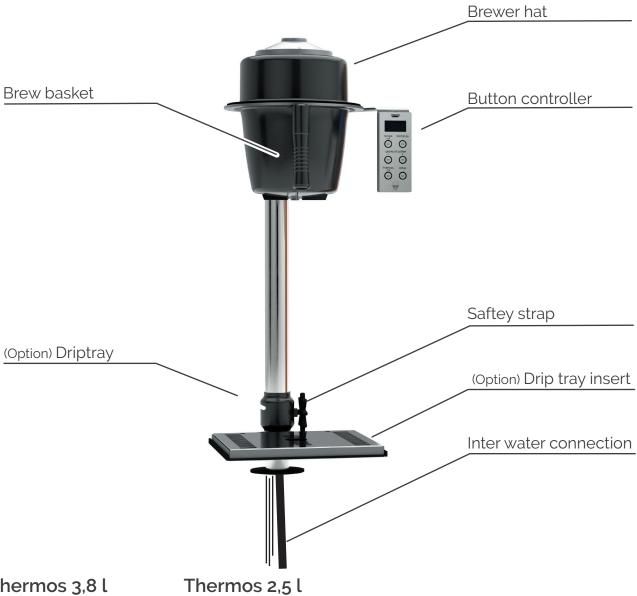


Thermos 3,8 l



Level tube

Coffee tap

4.2 The cycle of The Hipster taste-profiling

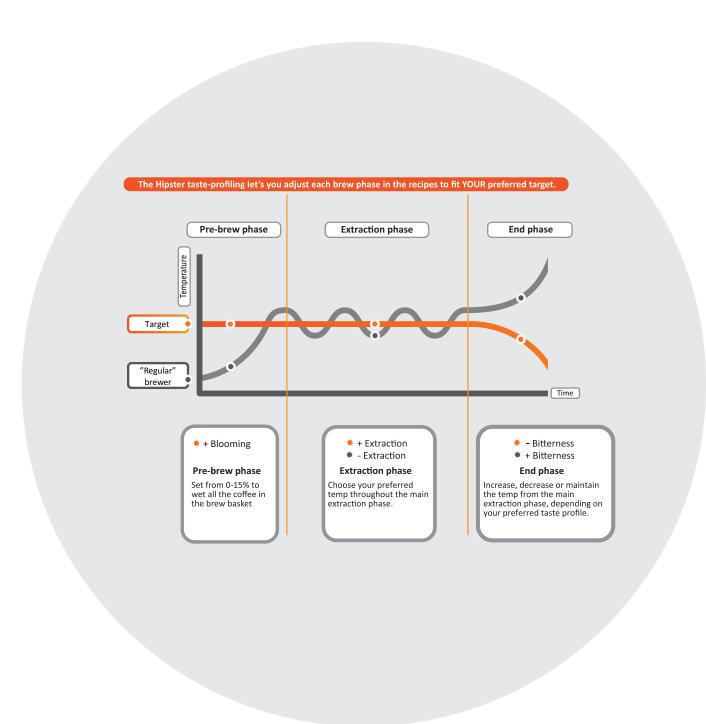

5. Technical data

5.1 Technical data

Including button controller, router.

The machine is placed on the counter. The HeatCase below counter.


Capacity: 1x3,8 lit 200 cups/h.

Dimensions main unit: W275mm/D387mm/H Max 830mm. (adjustable)


Dimensions HeatCase W181,5/D395,5/H262 Weight total: 10 + 9 kg. (HeatCase)

Max power hot: 230V 1x2400W.

Max power cold: 1x38W. Max power idle: 7 W.

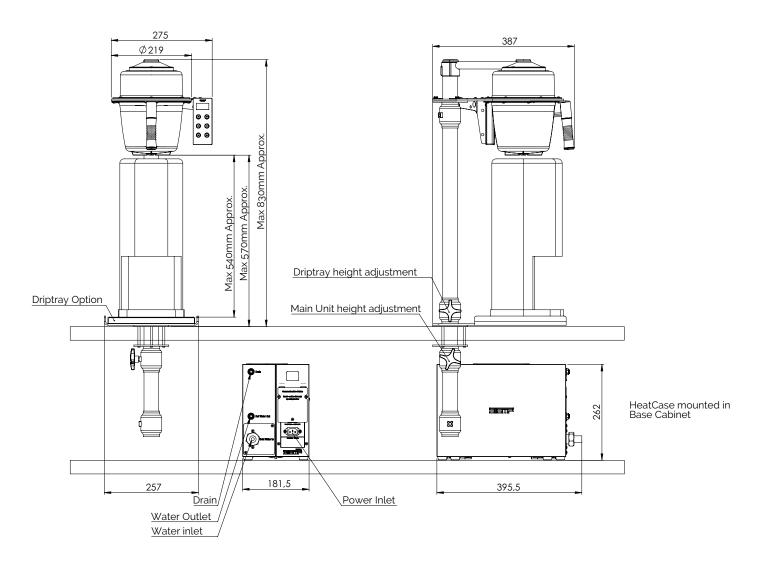


TUBE 220 - 240 VAC 2400W

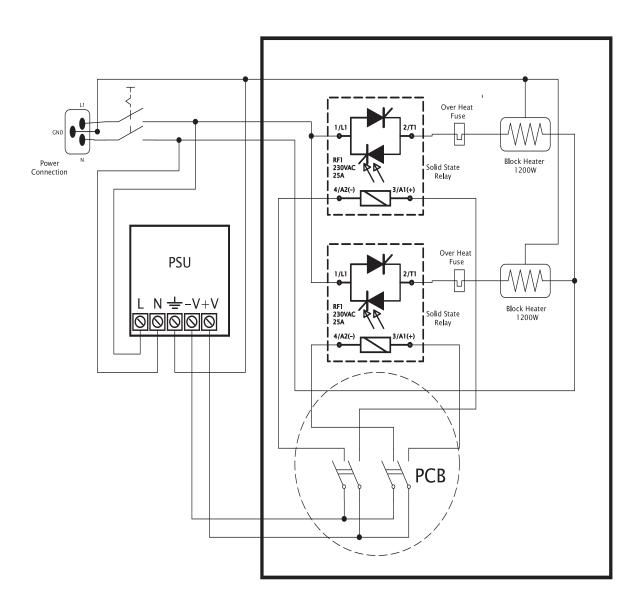

6. Unpacking



Router



Non-return valve



Brew basket plastic




Coffee filter 1x 25. 110/330





RJ hub Extension adapter



Main unit Hipster KOBRA



Thermos 2,5 Litres



Extension cords router



Inlet hose



7. Installation instructions

7.1 Description

Tools needed:

- Spirit-level
- Adjustable spanner
- Hex key 4 mm

2,5 mm

- Drilling machine, Drill
- Screwdriver
- Marker pen
- Hole saw





WARNING
Hazardous
voltage.

Disconnect power before servicing.

7.2 Installation

1. Make sure the surface is horizontal.





Caution! Make sure the KOBRA is in level, or it will not extract evenly in the filter basket. Use a spirit-level.

2. Use the drilling template to place the KOBRA accordingly.


Note! The drilling template is extra material in the manual.








3. Drill the holes on the surface to assemble the KOBRA.

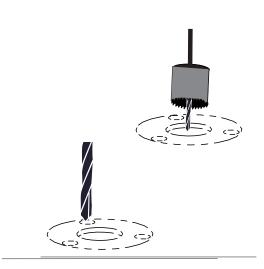

4. Attach provided silicone between A and the counter top. Apply the silicone throughout the area of the flange. This is to prevent water leakage into the HeatCase. Tighten the screws **A** and **B** together.

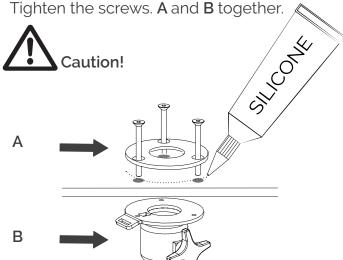



5. Open the spanner and fasten the adjustable spanner in the upper loop.






Note! Be careful with cords and hoses.

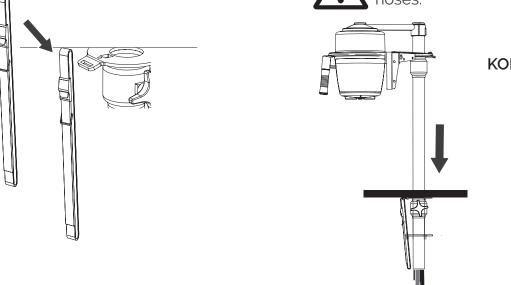

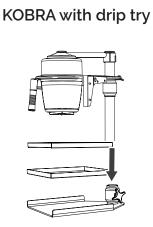


7. Take the safety stop in line with the end of the KOBRA.

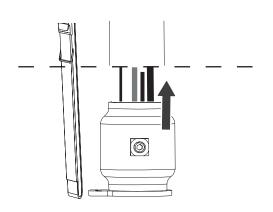

8. Tighten the screw with a Hex key 4 mm.




Caution! Tighten the screws properly.

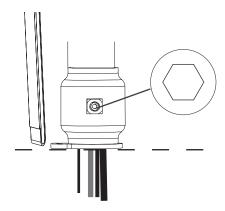

9. Fasten the adjustable spanner to the loop at the bottom of the KOBRA.



Caution! Spanner is for safety. Tighten the spanner properly.





7.3 Installation button controller

- **1.** Decide where to place the button controller; either on the left hand side or the right hand side.
- **2.** Bend the button controller-holder to the correct angle.




Note! This example is to the right

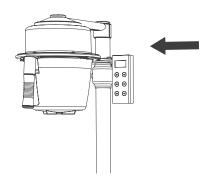





3. Place A and B together.


4. Fasten the button controller.

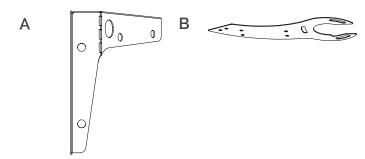


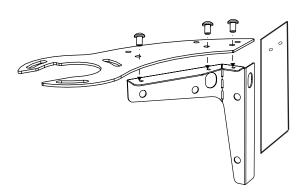

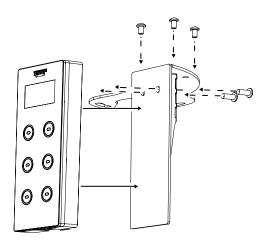


5. Unlock the screws. Place the button controller on the bar.



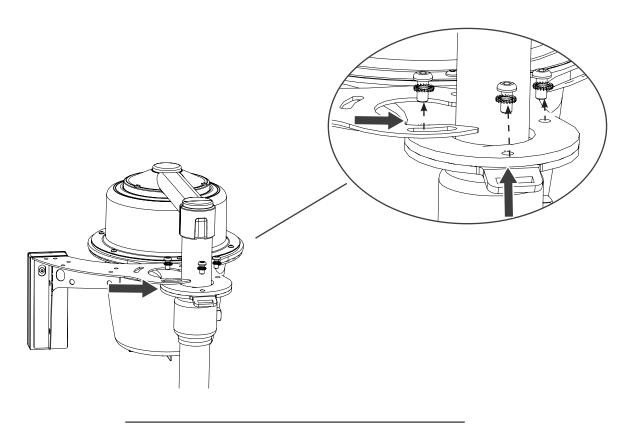

6. Tighten all screws.

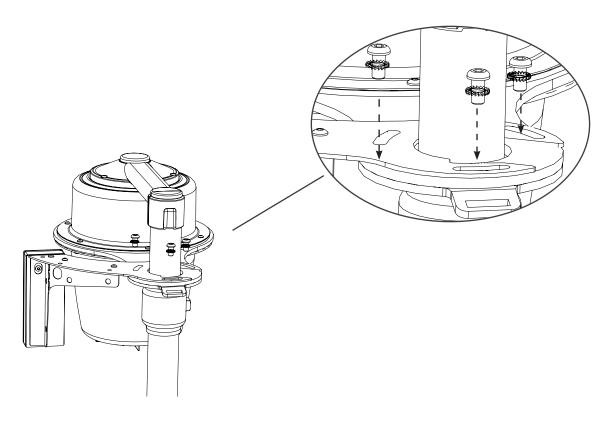


7.4 Installation HeatCase

1. Fasten the cords and the non-return valve.


Tighten the inlet hose on the backside of the HeatCase.




Important! When fasten the non-return valve; make sure that the arrow is in the right direction (toward the machine).

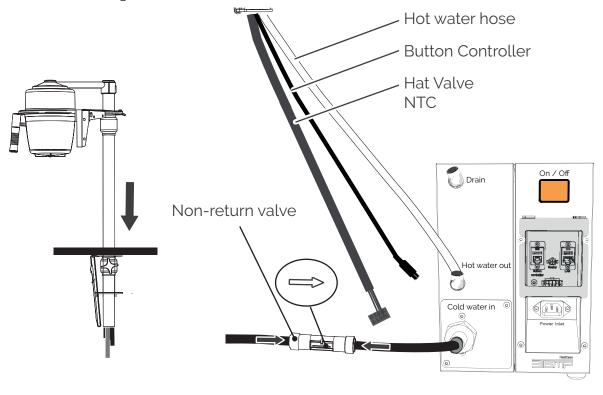

1. Fasten the angle of the hoses.

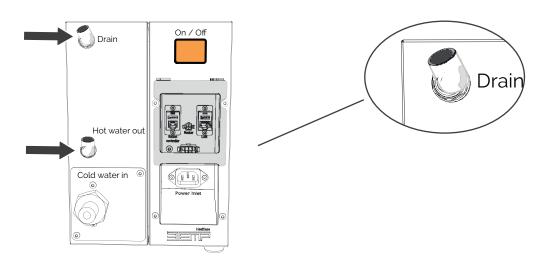

2. Connect the hoses and the cords in to the HeatCase.

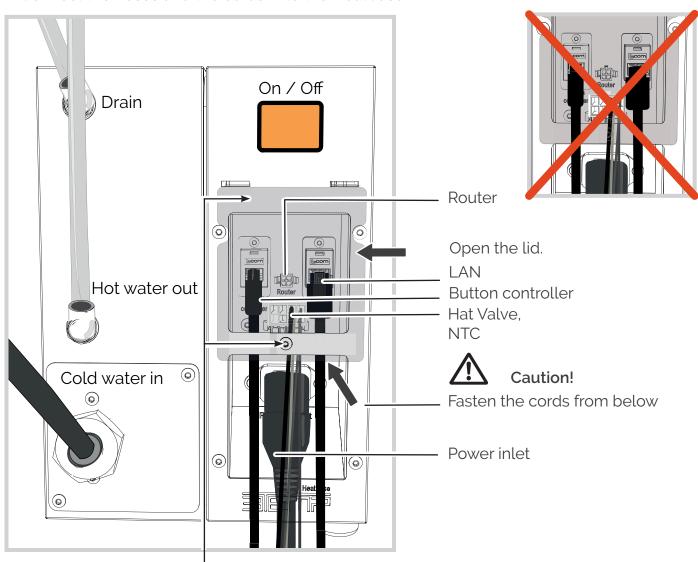



Warning! Close the lid properly in front of the connections. Tighten the screw in the middle; if not, the warranty will expire.

7.5 Machine status

State nun	nber State name	Light	
Ο.	Off		
1.	Startup		
2.	Idle	Green	HIPSTER
4.	Running	Blue	
16.	Heater error	Red slow blink	
19.	Connector error	Red fast blink	recipe start/stop
20.	Watersupply error	Red fast blink	1-8

7.6 Connect the water filter system.



Note! See manual with the filter set.



7.7 Connect the network

Connect the network cable (RJ45) white cable. To the LAN-port of the router.



- **1.** Start the router 1 minute before you start the coffee machine in order to get an IP-address.
- 2. Start the machine.
- 3. A short beep sound means the brewer is on.
- 4. After 3-8 sec a long beep means that the brewer have received an IP-address.
- 5, Start a run cold. 300-400 ml will be dispensed.
- **6.** Now the KOBRA is installed. You are now ready to brew see page 22.



Note! For 3TEMP to be able to support you in the best possible way, please connect your Hipster to the internet via LAN, WLAN or GSM. Use tethering on the router and connect to your existing Wi-Fi.

- If you need support, please send us an email to support@3temp.com or call your nearest support.
- If you want to give us feedback on the product; please send us an email to support@3temp.com


8. User instructions


8.1 Prepare a brew

- 1. Place the thermos under the brew basket.
- **2.** Remove the brew basket from the brew hat.



Danger! Can cause serious burns. Do not remove the brew basket while brewing and the lamp indicator flashes blue.

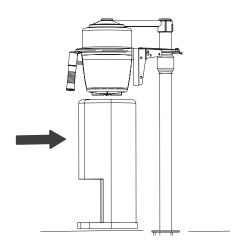

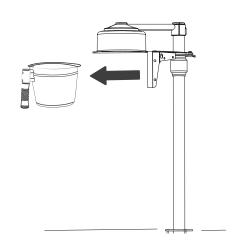

- 3. Add filter to the brew basket.
- Note! Make sure the filter fits correct.
 Use 3TEMP coffee filter paper.
- 4. Add coffee into the filter.
- [!]


Note! Make sure the coffee is spread evenly and the surface is flat.






5. Reinstall the brew basket.


6. Ready to brew.

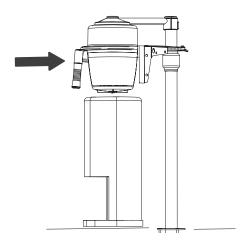

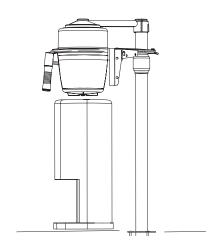


8.2 Select recipe


1. Select a recipe.

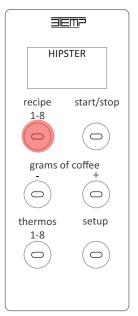


2. Adjust grams or millilitre. If needed.

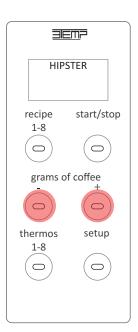

3. Press Start to brew.

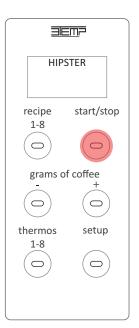

4. Brewing in progress. Press **Stop** button to stop.

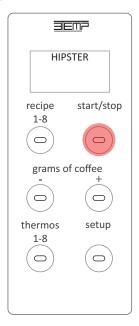





Caution! The metal parts of the Brewer hat will be very hot.

5. Brewing is in progress when the blue indicator is flashing.


6. When the brew is finished, the indicator light turns green and a beep is heard.

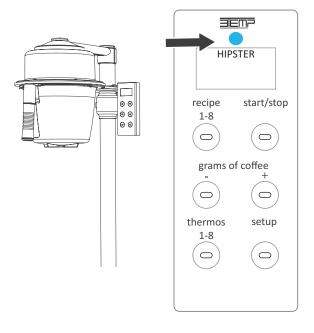


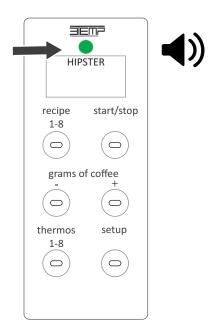

8.3 Thermos detachable serving base

- **1.** Place the thermos and place it on the detachable serving base.
- 2. Place the cup on the white spot.

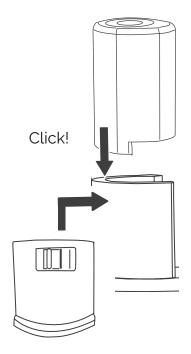


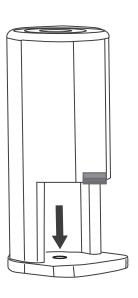

3. Press for coffee.




Warning! Hot coffee.

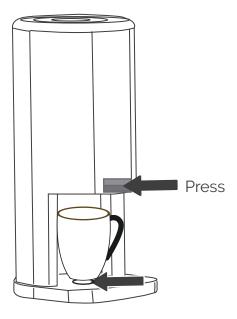

9. Recipe settings with button controller.

9.1 Recipe settings

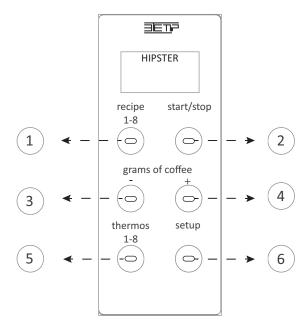

- Button 1: Enter recipe editor by pushing and holding down the button until display shows "Edit Recipe".
- Button 2: In mode "Edit Recipe" this button enables/disables the recipe.

 (Disabled recipe is still in the machine but does not show when pushing

 1 "Recipe 1-8" in normal mode).
- Button 3: Step Down/Back/Previous item (-) in every menu.
- Button 4: Step Up/Forward/Next item (+) in every menu.
- Button 5: Previous menu/Back/Cancel
- (6) Button 6: Next Menu/OK

Example: How to "Edit a Recipe"

"slot" is the recipe number (1-8)

- 1. In idle mode enter "Programming mode" by pushing and holding button until "Edit Recipe" shows in display.

- 2. Use buttons
- or
- - to chosen recipe slot (1-8).
- 3. Press button 6 to edit selected recipe slot.
- 4. Select type of recipe by using

Available selections:

EMPTY Empty slot/Delete recipe, create empty slot

BATCH/SINGLE/COLD BREW Existing recipe in slot

NEW BATCH 1.0/60 Template Batch brew 1000 ml water 60 grams of coffee

NEW BATCH 2.0/120 Template Batch brew 2000 ml water 120 grams of coffee

NEW BATCH 2.5/150 Template Batch brew 2500 ml water 150 grams of coffee

NEW BATCH 3.5/210 Template Batch brew 3500 ml water 210 grams of coffee

NEW SINGLE 0.3/18 Template Single brew 300 ml water 18 grams of coffee

NEW SINGLE 0.5/30 Template Single brew 500 ml water 30 grams of coffee

NEW COLDB 1.0/85 Template Coldbrew 1000 ml water 85 grams of coffee

NEW COLDB 2.0/170 Template Coldbrew 2000 ml water 170 grams of coffee

NEW COLDB 2.5/213 Template Coldbrew 2500 ml water 213 grams of coffee

NEW COLDB 3.5/298 Template Coldbrew 3500 ml water 298 grams of coffee

- 5. Press to enter selected recipe.
- 6. Use to set the chosen values. or
- to enter next recipe configuration. **7.** Press
- **8**. Repeat step 6 and 7 until "Confirm Save" appears.
- 9. Confirm by pressing
- 10. Menu is now back in "Edit recipe". Select another slot by using repeating steps 2-9 or leave "Programming mode" by pressing



Note! Button (



always moves back to previous selection.

The recipe automatically get the following name:

"slotnumber"-"water amount"/"default grams"-"strength in grams/liter"

Name:

4-2500/213-55

Means following:

Slotnumber: Number 4

Water amount: 2500 ml of water Coffee: 213 grams of coffee

Strength: 55 grams coffee per liter water


Delete recipe

"slot" is the recipe number (1-8).

- 1. Do step 1-3 in "Edit recipe" (page.27).
- 2. Select EMPTY by pressing
- 3 or (4)
- 3. Press 6 to enter "Confirm Delete".
- 4. Press 6 to confirm deletion of recipe.
- Button (5) always moves back to previous selection.

Enable/Disable recipe

- 1. Do step 1-2 in "Edit recipe".
- 2. Press $\binom{2}{}$ to switch from one setting to another Enabled/Disabled status of slot.
- 3. Press 6 to enter "Confirm Enable/Disable".
- 4. Press $\begin{pmatrix} 6 \end{pmatrix}$ to confirm Enable/Disable slot.
- Note! Button (5) always moves back to previous selection.

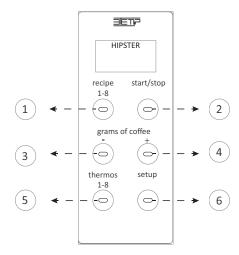

10. Care and maintenance after use.

10.1 Cleaning instructions

Always follow the cleaning instructions!



Clean parts, accessories, filter basket and thermos using warm water and a gentle dish washing liquid and rinse well. Wipe the outer housing and drip tray with a soft damp cloth and dry thoroughly.



Caution!

Protect your eyes.



Danger!

Disconnect the appliance from the power socket before assembly, disassembly and cleaning.



Caution!

Do not use rough abrasive materials or sharp object which can scratch the surface of the coffee machine. Use a soft cloth to clean the drip tray.



Important!

Keep the coffee machine clean.



Caution!

Do not use liquids other than water.




Danger!


Appliance must not be cleaned by a water jet.

10.2 Cleaning Thermos

1. Remove the brew basket from the brewer hat.

2. Clear any object freefrom the brew basket.

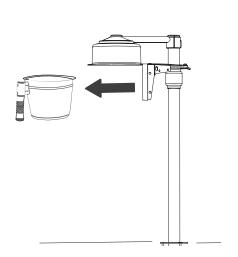

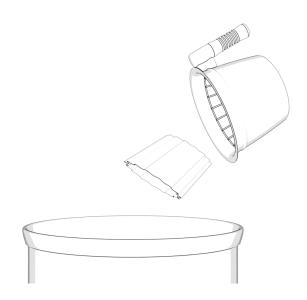

3. Make sure the thermos is empty.




Caution! Protect your eyes.

4. Cleaning Tablet (Part Nr :100204)





Warning! Keep away from children.

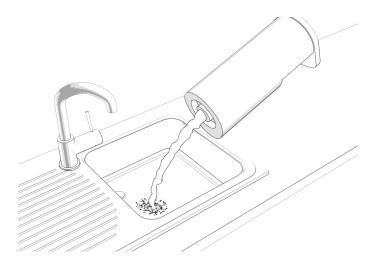




- **5.** Reinstall the brew basket and the thermos.
- **6.** Choose suitable recipe. 3TEMP recommend 2,5 lit

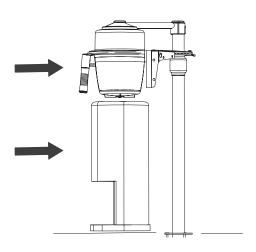


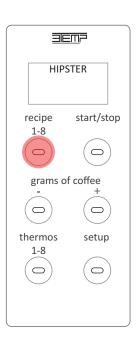

7. Press Start on the Button controller.

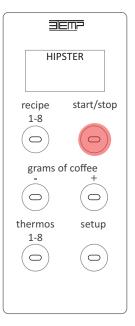

8. Wait for the brew process to finish; Press **STOP** to interrupt the brewing process.

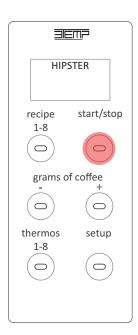

9. When finished. Clear the thermos out of cleaning fluid.




Warning! Hot water.




Note! For better result; let it stand for approx. 1 -2 hour in the thermos.



Protect your eyes.

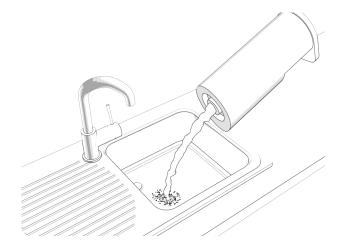


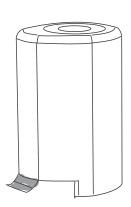

10. Clean it with a dish brush. Rinse out several times!



Caution! Make sure that **no** cleaning fluid is left in the thermos. Rinse out properly.

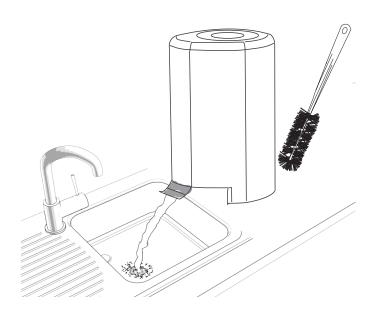

10.3 Cleaning water strainer


- **1**. Dissolve a cleaning tablet in hot water.
- 2. Remove screws (A) and detach shower screen (B).



Warning! Hot water.



Protect your eyes.

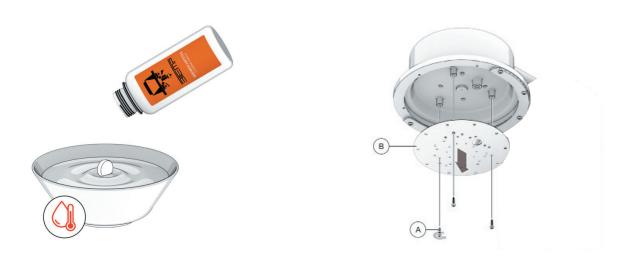

- **3.** Clean water strainer using the dissolved cleaning solution prepared in step 1.
- 4. Reassemble shower screen.



Caution! Tighten all screws evenly and make sure water strainer is in level.





11. Spare parts

Adjustable foot 550357 Brew basket plastic 600968 Brew basket steel 600537 Button controller 600917 Brewer hat 600607 500 Coffee filter 110/330 500277 Drip tray black 1gr 600719 Drip tray insert 600720 Drip tray bracket 550426 Extension adapter 600961 Extension cord router rj45 600948 Inlet hose black 600941 Thermos 550152 Water filter best max V 500242 Water filter installation kit typ 1 500243 typ 2. 500249 Wire insert for single brew 500953 Wi-fi router and tablet 600919 230 3G 600920 UK 4G 600920 240 4G 600920 US 4G Hario wire insert 500913 Water block 600839 Wire insert for single brew 500953 Non-return valve 550038

12. Extra additions

Cold brew

Extra addition; cold brew function.

The Hipster series brews a batch of cold brew like it does with regular coffee, but without the heat in only 18 minutes (2,5l).

Since there is no boiler with preheated water you can also brew with the cold water that comes into the brewer from your water mains.

To order the cold brew function; contact support@3temp.com.



KOBRA with drip tray

Installation see page 16.



Single brew

Hario wire insert

Brew basket steel

- **1.** Place the drip tray.
- 2. Place the cup on the holder.
- 3. Start a recipe for single brew.

To order the drip tray; contact support@3temp.com.





13. Declaration of conformity

This declaration of conformity is issued under the sole responsibility of the manufacturer We declare under our sole responsibility that this product is in conformity with all relevant provisions of the following directives including their amendments and complies with the following standards. The product is in conformity with the following standards and/or other normative documents:

Manufacturer: PLAE2TECH AB

Brand: 3TEMP

Equipment Type: Professional Coffee Brewers for institutional catering

Object of declaration: Hipster series: Hipster 1GRP, Hipster 1GRP UC, Hipster PULS, Hipster KOBRA

Product Name: Hipster KOBRA

Category: Specialty Coffee Recipe Brewer/Profile Brewer.

Safety; Standards to which Conformity is Declared:

IEC 60335-1:2016

IEC 60335-2-75:2012+A1:2015

EN 60335-1:2012

EN 60335-2-75:2004+A1:2005+A11:2006+

A2:2008+A12:2010 EN 62233:2008

UL 197 Commercial Cooking Appliance

E48744441190614153146 E4874431190614153101 MH618991190617174048

Health; Food Contact; COMMISSION REGULATION (EC) No 2023/2006;

on good manufacturing practice for materials and articles

intended to come into contact with food

Regulation

1935/2004/EC; On materials and articles intended to come into constancy with food.

NSF/ANSI 372

NSF 4

Measured levels below Swedish heavy metal norm.

SLVFS 2001:30

Hipster Taste Quality: European Coffee Brewing Center (ECBC) approved 1.5-2.5 litres.

Anders Eriksson, CEO 3TEMP









14. Warranty

Warranty

12 months for manufacturing defects– product and spare parts . Cover costs for defective parts

Warranty period valid according to purchase contract calculated from date of purchase.

Scope of warranty

This warranty covers faults occurring during the warranty period, which have been notified to the reseller or verified by 3TEMP (warrantor) or a representative of the warrantor, and which concern design, manufacturing or material defects and consequential damages occurring on the product itself.

Warranty limitations

This warranty applies on condition that the product is used in a normal fashion or under comparable circumstances for its intended purpose and that the instructions for use are followed.

This warranty does not cover faults caused by:

- Transport of the product.
- Careless use or overstraining of the product.
- Failure on the part of the user to follow instructions concerning installation, use, maintenance, care and handling.
- Incorrect installation or incorrect positioning of the product.
- Conditions that are not due to the warrantor, e.g. excessive voltage variations, lightning, fire and other accidents.
- Repair, maintenance or design changes made by an unauthorized party.
- Faults that do not impact operation, e.g. surface scratches.
- Parts that through handling or normal wear are exposed to greater than average hazard, e.g. lamps, glass, ceramic, paper and plastic parts, and filters and fuses are not covered by the warranty.
- Settings; information on use, care, handling, service or cleaning that are customarily described in the instructions for use; or works caused by the user neglecting to observe warning or installation instructions; or investigation of such are not covered by the warranty.
- The warrantor is responsible only for the operation if approved accessories are used.
- The warranty does not cover product failures caused by accessories/equipment from other manufacturers.

General warranty limitations

The warrantor's responsibility is limited in accordance with these warranty terms and the warranty does not cover property damage or personal injury. Verbal promises made in addition to this warranty agreement are not binding for the warrantor.

Service terms during the warranty period

According to your agreement with your local distributor.

Rectification measures when fault is detected


When a fault is detected, the customer must notify this to the distributor. Specify what product this applies to (serial number are listed on the product label), and describe the fault and how it occurred as accurately as possible.

For a warranty repair to be performed, the customer must prove that the warranty is valid by presenting the receipt of purchase. After the warranty period has expired, warranty claims that have not been made in writing before the expiration of the warranty period will not be valid.

15. Notes



3TEMP can not accept any responsibility for possible errors in catalogues, brochures and other printed material provided that such alterations can be made without sub sequential changes being necessary in specifications 3TEMP/PLAE2TECH. All rights reserved 2019

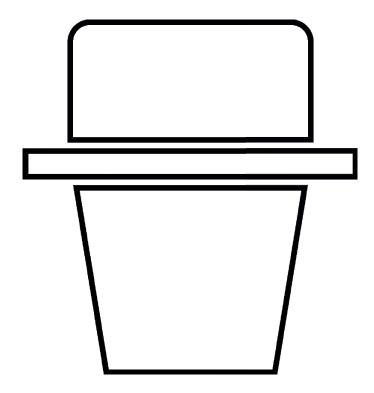

"The details create the big picture"



Web: 3temp.com

Mail: 3TEMP

Magasinsgatan 3 67131 Arvika

Email: info@3temp.com